




Quality Tools for Smart Cleaning

# PRO TRIM 10: The convenient lightweight scraper for every day OPERATING & SAFETY INSTRUCTIONS



TX100
 
## Using the scraper

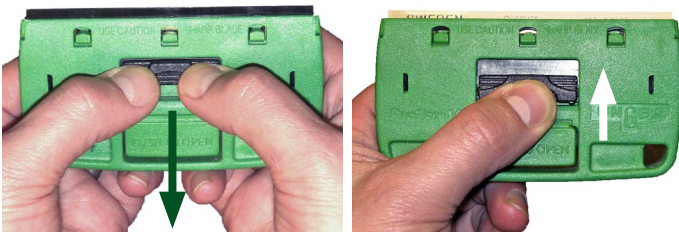

### Remove blade protector

- firmly push away the black slide from the blade using both thumbs to remove the blade protector. Press lightly.

### Putting the scraper at safety - extend blade protector

- pull the black slide to the blade to put the scraper at safety



 
 
 
## Safety instructions:

- The UNGER glass scrapers with carbon blades, featuring **2 sharp edges**, are perfect for removing bird droppings, paint, tape, stickers and postconstruction debris from the glass.
- **Check if glass is scratch-resistant** and suitable for scraper use. Unsuitable for use on Plexiglas, crown glass, solar glass, safety glass (ESG). Follow the manufacturer's care instructions
- **Perform a scrape test** in advance on an inconspicuous section
- Before starting work, **check the glass for damage** and report it, if necessary
- **Check the blade for damage** and change it, if necessary, or reverse it
- The **surface** to be scraped should always be **wet**
- It is best to use a **release agent**, e.g. "UNGER's Liquid"
- **Always scrape in one direction!** Never pull the scraper back – scratch risk!
- After scraping, check if adhesive or stucco residues are stuck to blade. If necessary, change or reverse blade



**ATTENTION!**  
UNGER blades are razor-sharp.  
Always handle with greatest care!

## Changing the blade

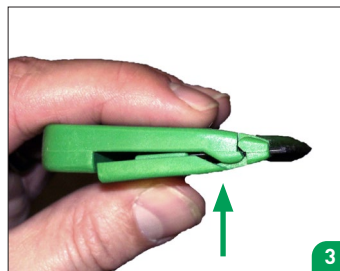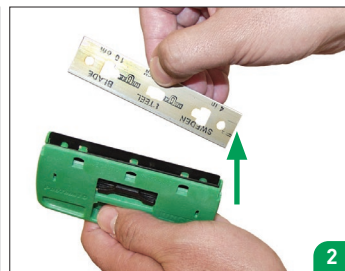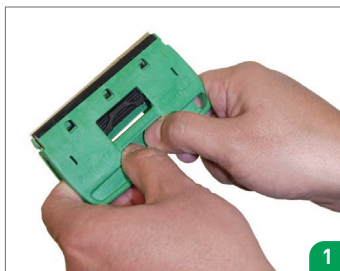

### Open the body

- press green button deep inside to open the body

### Turn or change the blade

- remove or turn the blade
- blade has to fit both pins (arrows)

**ATTENTION:**  
Danger of injuring oneself!

### Close body

- hold both sides of the body that
  - a) both lateral noses hook in the body
  - b) three internal noses can click into the top side of the body
- press the both halves of the body, green button has to click into place audible

### ATTENTION:

**While changing and turning the blade hold scraper even (black slide at the top) avoid falling off the blade:**

**Danger of injuring oneself !!!**

UNGER Germany GmbH  
Piepersberg 44  
D-42653 Solingen  
Tel.: (49) 212 2207 0 • Fax: (49) 212 2207 222  
ungereurope@ungerglobal.com

UNGER UK Ltd.  
F1 Deansgate, 62-70 Tettenhall Road  
Wolverhampton, WV1 4TH  
Tel.: 01902 306633 • Fax: 01902 306644  
ungeruk@ungerglobal.com

[www.ungerglobal.com](http://www.ungerglobal.com)

